


BAXTER COLLECTION

ASSEMBLY INSTRUCTIONS

Note: 1. Before assembly, please be sure to work on a soft, flat surface to avoid any damage to the finish.


2. You need at least 2 people to finish the assembly of this product.

Made In China

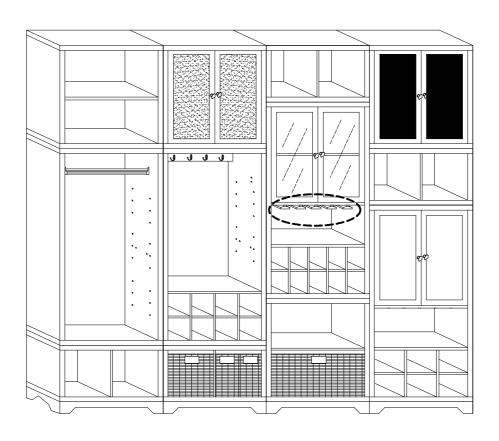


HDC# 12382 MFG# TW-19028BK/TW-19028WE BAXTER STEMWARE HOLDER

PARTS LIST

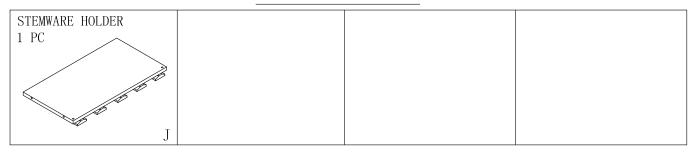


STEP 1: ASSEMBLE SIDE PANEL (A & B) AND STEMWARE HOLDER (J)

• USE CAM-BOLT & CAM-LOCK (1) TO ASSEMBLE SIDE PANEL (A & B) AND STEMWARE HOLDER (J) TOGETHER.

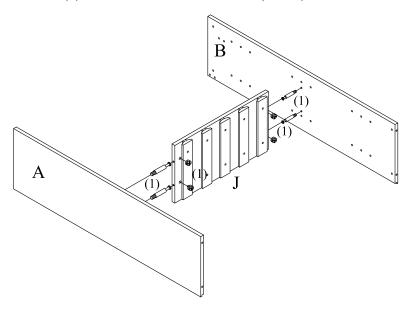

STEP 2: ASSEMBLE TOP PANEL (E) AND BOTTOM PANEL (D)

- USE BOLT & HORIZONTAL HOLE NUT (2) TO ASSEMBLE TOP PANEL (E), BOTTOM PANEL (D) AND SIDE PANEL (A & B) TOGETHER.
- USE VELVET HOLE COVER (2) TO COVER THE HORIZONTAL NUT HOLES AS SHOWN.

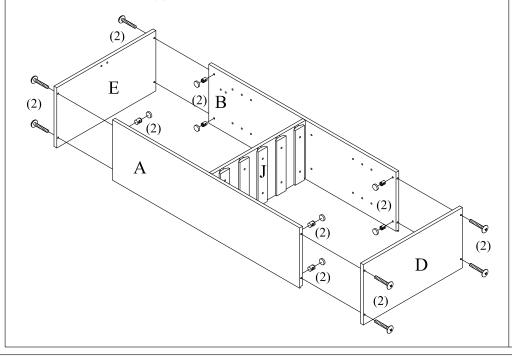

STEP 3: ASSEMBLY OF STEMWARE HOLDER IS COMPLETE AS SHOWN.

